

CLEANING FABRIC

Please always refer to your specific fabric cleaning requirements, as they vary from range to range. However, no matter what fabric you have, regular light dusting will help keep it looking its best. Use a feather duster, cloth, or vacuum with soft brush attachments.

CLEANING HARDWARE

To clean blinds, dust with a feather duster, cloth or soft brush attachments on your vacuum. Spot clean using warm soapy water.

PROTECTION

Never spray cleaning products directly onto your blind or you may damage the fabric. When cleaning windows behind blinds, avoid contact with your blinds by always spraying glass cleaner directly onto your cleaning cloth before wiping down the glass. Cleaning products with an alcohol-based solution may tarnish the blind's powder coat finish and are best avoided. Never immerse hardware or motors in cleaning solutions or liquids of any kind.



MOTORS

Charging rechargeable batteries varies depending on usage and the size of the blinds. Typically, rechargeable batteries should be charged every six to twelve months. A beeping sound will notify users when the battery requires recharging. For AC motors, they can remain plugged in continuously without the need for manual recharging.

RECOMMENDED COASTAL CLEANING SCHEDULE

CORROSION POTENTIAL	DISTANCE TO SALT-WATER	CLEANING SCHEDULE
Low	20km radius	Every 6 months
Moderate	10km radius	Every 3 months
High	1km radius	Every 3 weeks
Extreme	500m radius	Every week