



Shadesol Outdoor Shades

Product care for Zipscreen, Wire Guide, Straight Drop & Pivot Arm

CLEANING FABRIC

Maintain the premium appearance of your Shadesol outdoor shades with regular light dusting and fabric spot cleaning when necessary. Use a dusting cloth or vacuum with soft brush attachments and spot clean with warm soapy water.

CLEANING HARDWARE

For optimal maintenance, hardware should be cleaned once every six months. Use a nonabrasive cloth or sponge and warm, soapy water.

PROTECTION

Never spray cleaning products directly onto your blinds or you may damage the fabric. When cleaning windows behind blinds, always spray glass cleaner directly onto your cleaning cloth before wiping down the glass. Cleaning products with an alcohol-based solution may tarnish the shade's powder coat finish and are best avoided. Never immerse hardware or motors in cleaning solutions or liquids of any kind.

MOTORS

Charging rechargeable batteries varies depending on usage and the size of the blinds. Typically, rechargeable batteries should be charged every six to twelve months. A beeping sound will notify users when the battery requires recharging. For AC motors, they can remain plugged in continuously without the need for manual recharging.



RECOMMENDED COASTAL CLEANING SCHEDULE

CORROSION POTENTIAL	DISTANCE TO SALT-WATER	CLEANING SCHEDULE
Low	20km radius	Every 6 months
Moderate	10km radius	Every 3 months
High	1km radius	Every 3 weeks
Extreme	500m radius	Every week